Pulsed laser diode illuminator (QD-QXY10-ILO)

Laser solutions by LUMIBIRE





MAIN FEATURES

- mJ CLASS NIR LASER DIODE ILLUMINATOR
- SUPERGAUSSIAN TEMPORAL PULSE SHAPE
 - 100 to 200 ns (FWHM)
- PULSE REPETITION RATE **UP TO 10 kHz**
- HIGH AVERAGE POWER
 - Up to 15 W with 5-mm emission width
 - Up to 20 W with 10-mm emission width
- HIGH EFFICIENCY DIODE BARS
 - Standard wavelengths: 808, 905 or 980 nm
- FAST AXIS COLLIMATION
- 12 VDC LOW POWER CONSUMPTION
- COMPACT AND PORTABLE
- PROTECTIVE HOUSING
- ROBUST DESIGN
 - High reliability (> 100 x 109 shots)
 - Shock and vibration resistant
 - Qualified for defense and space applications

APPLICATIONS

- PHOTOACOUSTICS
- NIR SPECTROSCOPY
- ULTRASOUND GENERATION
- 3D FLASH LIDAR
- TIME OF FLIGHT

MARKETS

- MEDICAL
- AUTOMOTIVE
- CIVIL ENGINEERING
- SECURITY
- DEFENSE & SPACEAEROSPACE

OUTPUT ENERGY AT 25°C

	EMISSION WIDTH		
PULSE WIDTH	5 mm	10 mm	
200 ns		2.5 mJ	
175 ns	1.7 mJ	2.25 mJ	
150 ns		2 mJ	
125 ns	1.5 mJ		
100 ns	1 mJ		

Output energy can be adjusted from 10% to 100% by external 0-12 VDC power supply.

OPTIONS

- EXTERNAL POWER SUPPLY
- TEC COOLING & FAN / WATER COOLING
- THER WAVELENGTHS WITH LESS ENERGY: 635 nm / 760 nm / 940 nm / 1.55 μm



OTHER SPECIFICATIONS

PARAMETERS	UNIT	5-mm WIDTH	10-mm WIDTH
STACK CHARACTERISTICS			
Number of diode bars		Up to 10	
Bar-to-bar pitch	μm	800	
BEAM CHARACTERISTICS			
Spot width in SA ⁽¹⁾ (FWHM)	mm	5	10
Slow axis divergence (FWHM)	deg	< 12	
Spot height in FA ⁽¹⁾ (FWHM)	mm	8	
Fast axis divergence with FAC ⁽²⁾ (FWHM)	deg	<2	
FAC lenses to output window distance	mm	4	
Wavelength at 25°C ⁽³⁾	nm	808, 905 or 980 (± 5 Typ.)	
Spectral width	nm	< 10	
Polarization		TE mode	
PARAMETERS	CONNECTOR MODEL	5-mm WIDTH	10-mm WIDTH
ELECTRICAL REQUIREMENTS			
General voltage DC power supply	2 sockets Ø2mm (LB_I2R)	12 VDC / < 5 A	
Energy adjustment voltage supply ⁽⁴⁾	LUMBERG (RSDF 4/0.2 M)	0-12 VDC / < 0.5 A	
Temperature sensor ⁽⁵⁾	LOWIDENG (NSDF 4/0.2 IVI)	PT1000	

Irigger signal	SMA Jack/Female	Frequency up to 10 kHz	
PARAMETERS		5-mm WIDTH	10-mm WIDTH
OPERATING CONDITIONS			
Operating temperature	°C	+ 15 to + 40	
Storage temperature	°C	- 20 to + 80	
Humidity		Non condensing for humidity rate lower than 70 %	
Lifetime at maximum energy		> 100 x 10 ⁹ shots	


- (1) SA: Slow axis, FA: Fast axis

Trigger signal

- (1) SA. Slow date, FA. Fast axis collimation
 (2) FAC: Fast axis collimation
 (3) Variation of wavelength with temperature is approximately 0.3 nm/°C.
 (4) Without any DC voltage (0-12 VDC), the output energy is maximum. When applying DC voltage between 0 and 12 VDC to adjust the output energy, the pulse width will decrease as well as the output energy (at 10% of maximum energy, pulse duration will be reduced by 30 %).

SMA Jack/Female

(5) A temperature sensor is included and fixed onto the laser diode base. Laser diode temperature can be monitored via a LUMBERG connector.

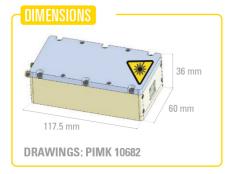



Many options and configurations are available. Please contact Lumibird to find the best match for your needs and compatibility between options.





Pulse mode, 5 V TTL, 1 \leq width \leq 5 μs